





LVI PULVIMASTER LITTER PROCESSOR
MODEL 96, MODEL 72 & MODEL 120

#LTMAN016

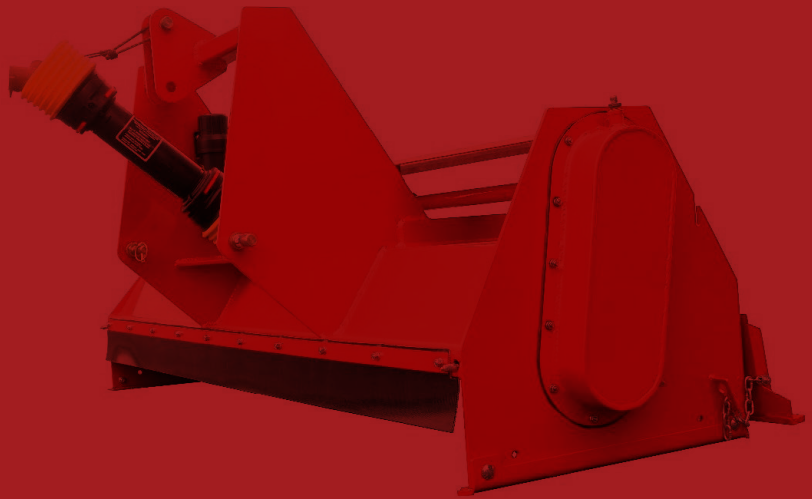


USER & PARTS MANUAL

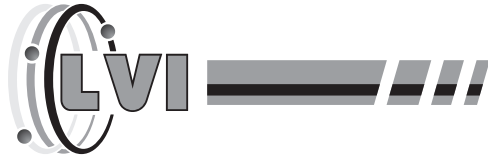

INDEX

Introduction	Pg. 3
Safety Decals	Pg. 4
Safety Message	Pg. 5
Operating Safety	Pg. 6
Maintenance Safety	Pg. 6
Storage Safety	Pg. 7
Pre-operation Checklist	Pg. 8
Equipment Matching	Pg. 8
PTO Shaft Information	Pg. 8
Operation	Pg. 9
Lubrication	Pg. 11
Chain Case	Pg. 12
Drive Chain Maintenance	Pg. 12
Warranty Forms	Pg. 30

Thank you for the Purchase & Support of your LVI Dairy Bedded Pack Composter!

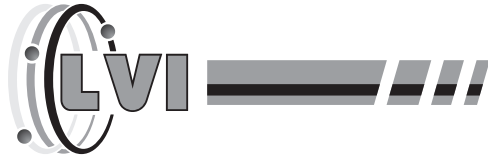

INTRODUCTION

Congratulations on your choice of a LVI LITTER PROCESSOR to complement your operation. This equipment has been designed and manufactured to meet the needs of the discriminating buyer for efficient processing of poultry litter. Safe, efficient and trouble free operation of your processor requires that you and anyone else who will be operating or maintaining the machine, read and understand the safety, operation, maintenance, and trouble-shooting information contained within the Operator's Manual.

This manual covers the Pulvimaster series manufactured by Binkley & Hurst, LP.

Keep this manual readily available for reference and be sure to pass it on to new operators or owners. Contact Binkley & Hurst, LP if you need assistance or information for a complete listing of parts and accessories.

OPERATOR ORIENTATION - The directions left, right, front and rear as mentioned throughout the manual are as seen from the tractor driver's seat, facing forward.

CUSTOMER REFERENCE INFORMATION

LVI Model Number: Pulvimaster: _____

LVI Serial Number: _____

Date Purchased: _____

Dealer Name: _____


Dealer Tel #: _____

BINKLEY & HURST, LP

Toll-free: 888.414.7518

LVI LITTER PROCESSOR PAGE: www.lvimfg.com

LVI DEALER LIST: www.lvimfg.com/dealerlist

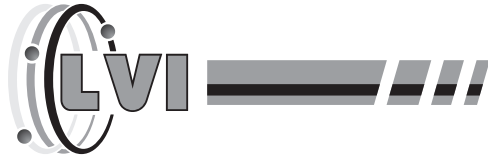


SAFETY DECALS

The safety decals have been placed on the machine at the time of manufacture. It is important that all the decals are kept clean and legible at all times. If any decals have become illegible or have been removed, replacements are available from Binkley & Hurst, LP.

Toll-free: 888.414.7518

These Safety Decals Are on your Dairy Bedded Pack Composter



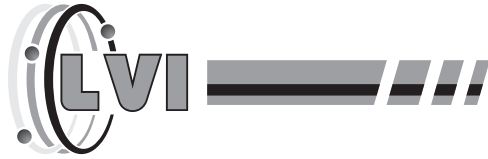


DANGER

You are responsible for the SAFE operation and maintenance of your LVI LITTER PROCESSOR. You must ensure that you, and anyone else who will be operating, maintaining, servicing or working around the processor be familiar with the operating and maintenance procedures and related safety information contained in this manual. This manual will take you step-by-step through the operation procedures and alerts you to all good safety practices that should be adhered to while operating the litter processor.

Remember, YOU are the key to safety. Good safety practices not only protect you, but also the people around you. Make these practices a working part of your safety program. Be certain that EVERYONE operating this equipment is familiar with the recommended operating and maintenance procedures and follows all the safety precautions. Most accidents can be prevented. Do not risk injury or death by ignoring good safety practices.

- Litter Processor owners must give operating instructions to their employees before allowing them to operate the machine and ensure that all operators have read and understood the safety and operating procedures.
- The most important safety device on the equipment is a SAFE operator. It is the operator's responsibility to read and understand ALL safety and operating instructions in the manual and follow them.
- A person who has not read and understood all operating and safety instructions is not qualified to operate this machine. An untrained operator exposes himself and bystanders to possible or serious injury or death.
- Do not modify the equipment in any way. Unauthorized modifications may impair the function and/or safety and could affect the life and warranty of the equipment.
- Think SAFETY! Work SAFELY!

Do not allow riders on machinery. Place all controls in neutral, stop the engine, set park brake, remove ignition key and wait for all moving parts to come to a complete stop before servicing, repairing or unplugging machinery.

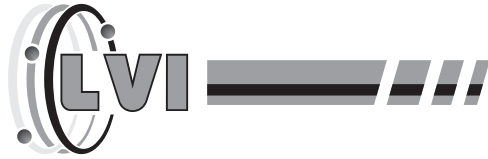


OPERATING SAFETY

1. Read and understand the Operator's Manual and all safety decals before using the equipment.
2. Clean reflectors, slow moving vehicle signs and lights before transporting.
3. Place all controls in neutral, stop the engine, set park brake, remove ignition key and wait for all moving parts to come to a complete stop before servicing or repairing.
4. Install and secure guards before starting.
5. Keep hands, feet, hair and clothing away from all moving and/or rotating parts.
6. Do not operate when guards are missing or broken.
7. Clear the area of all bystanders, especially children, before starting.
8. Do not allow children to play on or around the machine.
9. Do not allow riders on the LITTER PROCESSOR or tractor.
10. Be sure the PTO driveline guard telescopes and rotates freely on the shaft before installation.
11. Use hazard flashers on tractor when transporting on roads, and follow all local laws.
12. Review safety instructions annually.

MAINTENANCE SAFETY

1. Follow ALL the operating, maintenance, and safety information in this manual.
2. Place all controls in neutral, stop the engine, set park brake, remove ignition key and wait for all moving parts to come to a complete stop before servicing, adjusting, repairing or unplugging.
3. Support the machine with blocks or safety stands when working under it.
4. Follow good shop practices:
 - Keep service area clean and dry.

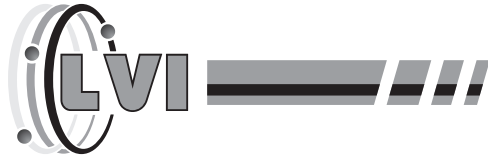

- Be sure electrical outlets and tools are properly grounded.
 - Use adequate lighting for the job at hand
5. Use only tools, jacks and hoists of sufficient capacity for the job.
 6. Make sure all guards and shields are in place and properly secured when maintenance work is completed.
 7. Keep hands, feet, hair and clothing away from all moving and/or rotating parts.
 8. Clear the area of all bystanders, especially children, when operating, repairing, or making adjustments to the machine.


STORAGE SAFETY

1. Store the unit in an area away from human activity.
2. Do not permit children to play on or around the stored machine.
3. Store the unit in a dry, level area.

PRE-OPERATION CHECKLIST

Efficient and safe operation of the LVI LITTER PROCESSOR requires that each operator reads and understands all the operating procedures and all the related safety precautions outlined in this section.

1. Lubricate the machine as per the schedule in the Service and Maintenance section of the manual.
2. Use only tractor with adequate power to operate your LVI LITTER PROCESSOR.
3. Make sure the gearbox oil reservoir is filled to the proper level.
4. Check the gearbox. Make sure the drain plugs are properly installed and tightened and not leaking.
5. Make sure the chain case reservoir is filled to the proper level.
6. Make sure pivot points and bearings are greased.
7. Ensure that the machine is properly attached to your tractor.

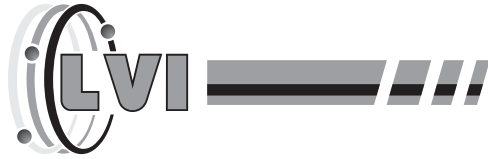

8. Check for and remove entangled material from the PTO, driveshaft and rotor.
9. Check that PTO driveline is pinned to the tractor.
10. Check rotor for missing or broken flails.

EQUIPMENT MATCHING

The LVI Pulvimaster model is designed to be used with agricultural tractors. To ensure a good performance, the following recommendations regarding minimum equipment size and horsepower should be met.

Model	PTO Horsepower	Weight
Pulvimaster96	60	960 lbs.
Pulvimaster72	45	800 lbs.


An operator must use his own discretion when determining whether the tractor attached is suitable. Using a small tractor on a heavy piece of machinery can cause severe injury or death if the operator loses control of the machinery.

PTO SHAFT INFORMATION

When the machine is attached to the tractor, the length of the PTO shaft must be checked. The shaft **MUST** overlap at least 4" in the longest position. Make sure the shaft **DOES NOT** bottom out in the shortest position while raising and lowering the machine. This is extremely important.

The machine should not be put into service if the PTO shaft has missing or broken guards.

PTO Shaft Lubrication: Every 8 hours of use, lube both U-Joints of PTO shaft with quality grease. Also slide the front half of the shaft off the rear half shaft. Smear grease on the male and the female portions of the shafts liberally and then reassemble the shafts.

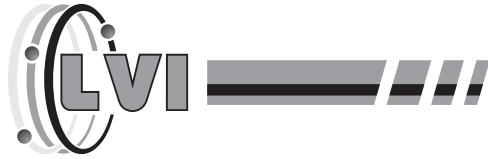

OPERATION

The LVI Pulvimaster is designed to pulverize litter in the poultry house after birds have been taken out of the house. Please follow these operating suggestions in order to provide maximum efficiency of operation and long life for your machine. Also maintain the machine as suggested.

After attaching the machine to the tractor, verify PTO shaft length is within proper lengths. Adjust tractor top link so that the Pulvimaster when in the lowered position, the skid shoes are slightly higher in the front than the rear. This is done to prevent the skid shoes from digging into the poultry house floor.

Adjust the chains on the tail drag lid to allow the lid to move upward to a 45 degree angle while moving forward. If the chains are adjusted too short the lid will not raise high enough and the pulverized litter will not be able to exit out the back of the machine. If the pulverized litter cannot exit out the back it will fill the machine trough and will cause the machine to vibrate and consume more power than necessary. This situation will vary depending on the depth and moisture of the litter.


Run the tractor PTO at approximately 500 rpm and not greater than 540 rpm. Forward tractor speed is dependent upon the depth and condition of the litter. At times if the litter has a thick hard crust the Pulvimaster may need to be run through the litter a second time in order to produce the desired results.

Note: Rocks, stones and other foreign objects can severely damage the machine. Avoid running these objects into the machine.

MAINTENANCE SCHEDULE


To ensure the long life for which the processor was designed, it is essential that the proper maintenance procedures are followed. The following chart indicates the manufacturer's recommended lubrication/maintenance schedule.

DESCRIPTION	HOURS OF OPERATION	SPECIAL INSTRUCTIONS
GEAR BOX	CHECK EVERY 6 MONTHS	80-90EP GL-5 GEAR OIL
CHAIN CASE	CHECK EVERY 3 MONTHS	80-90EP GL-5 GEAR OIL
PTO SHAFT	GREASE EVERY 8 HOURS	QUALITY LITHIUM 2 GREASE
BEARINGS	GREASE EVERY 8 HOURS	QUALITY LITHIUM 2 GREASE

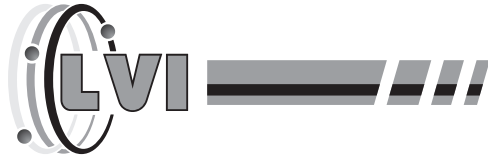

GEARBOX LUBRICATION

Gearbox: Oil level needs to be up to the small check plug on the side of the gearbox. Oil used is 80-90 EP gear oil - GL 5 classification. Check oil level on a regular basis. Oil capacity is approximately 3 pints.

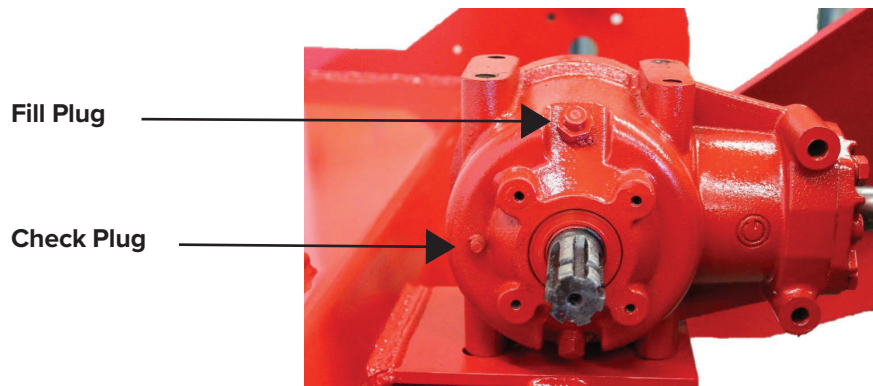



DRIVE AND BEARING LUBRICATION

Drive coupler left side of gearbox. Can be accessed from rear of machine underneath drive shaft shield. Grease 1 pump of grease every 8 hours of use.

(3) Bearings – 2 pumps of grease every 8 hours of use:

1. Upper drive shaft bearing next chain case (not pictured)
2. Rotor bearings lower front edges on left and right end of the machine (see below)

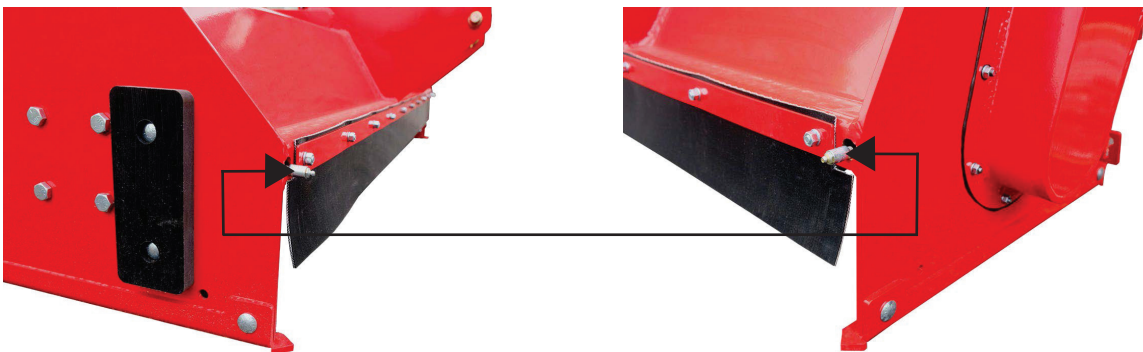

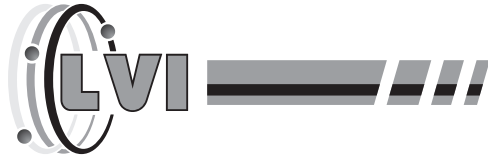



DRIVE CHAIN MAINTENANCE

To check tension adjustment of drive chain. Restrain rotational movement of upper drive shaft. [perhaps clamp a large vise grip pliers onto the drive shaft] Reach under machine from the rear and grasp the main rotor by one of the flail bars. While restraining movement of the upper drive shaft, gently rock the main rotor underneath the machine forward and backward. Notice the distance of movement at the flail attachment bolt. If the movement is not more than $\frac{3}{4}$ inch the chain does not need to be adjusted.

If the drive chain needs adjusting proceed as follows. Drain oil out of the chain case by removing oil level check plug and hoisting up the front of the machine to have oil drain out the plug hole. After oil is drained out lower front of machine to normal position. Remove nuts and bolts which attach chaincase to the machine. Drive an appropriate tool or a quality putty knife between the chaincase and the machine end plate about every 4 inches to cut the sealant loose. Be careful not to bend the chaincase edges. To adjust chain tension, loosen the 4 bearing retaining bolts. Turn adjusting bolt underneath bearing to push the bearing and shaft upward. The roller chain should have approximately $\frac{1}{8}$ " of movement on one span of roller chain midway between the two sprockets.


Clean the chain case and the machine end plate of all silicone and oil. Put a thin layer of silicone on the chaincase flange surface. Install the chaincase onto the machine and tighten bolts. Allow silicone to cure for at least one hour before installing oil into the chain case. Install 80/90 gear oil into chain case up to the oil check plug. [approximately one pint].

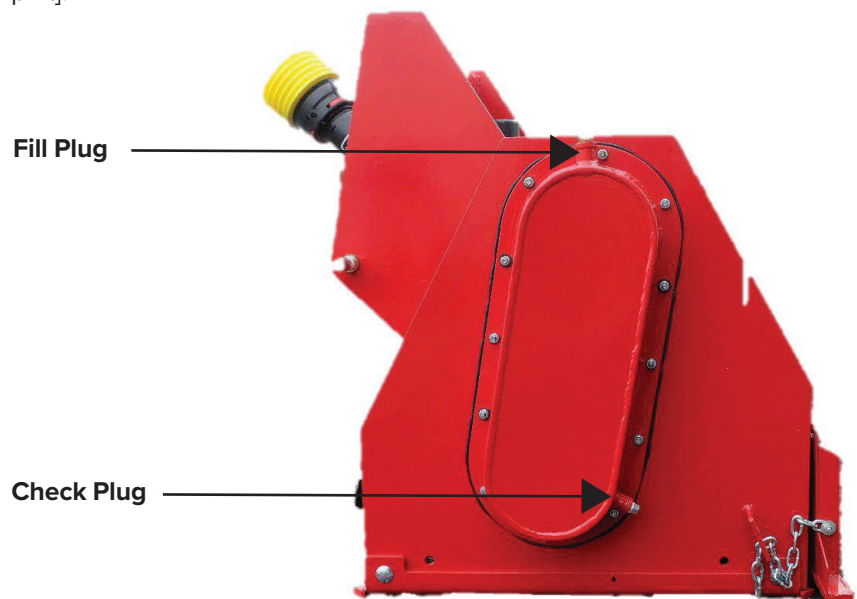

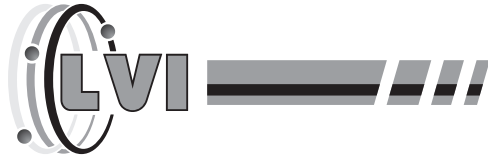

INDEX

3 Pt. Arm.....	Pg. 14
Front Rubber Curtain	Pg. 15
Rotor Assembly.....	Pg. 16
Flails	Pg. 17
Grease Tube	Pg. 18
Gear Box	Pg. 19
Drive Shaft.....	Pg. 20
Chain Case.....	Pg. 21
Tail Gate Lid.....	Pg. 22
Drive and Rotor Shaft Bearings	Pg. 23
Top Shaft / Bottom Shaft.....	Pg. 24
Drive Chain.....	Pg. 25
Skid Shoes.....	Pg. 26
PTO Shaft / Yoke	Pg. 27
Ware Plate	Pg. 28
Warranty Forms	Pg. 29

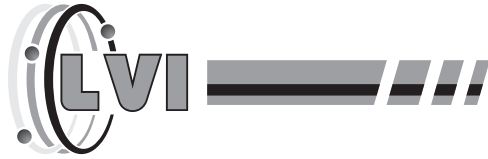

3 PT. ARM


Lower 3 pt. arm attaching pins - #LT873-1887, double pin with nut

Top link pin - #LTFX00076



SERIAL NUMBER PLATE

Right side of upper frame

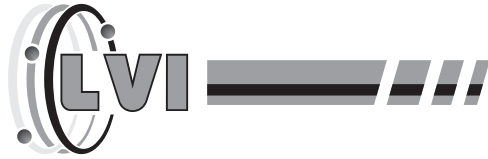

FRONT RUBBER CURTAIN

Pulvimaster 96


95" long x 6' wide - #LT011619, retained with (10) 3/8" x 1" bolt, nut, lockwasher

Pulvimaster 72

71" long x 6' wide - #LT050119, retained with (8) 3/8" x 1" bolt, nut, lockwasher

Pulvimaster 120

119" long x 6' wide - #LT060122, retained with (13) 3/8" x 1" bolt, nut, lockwasher

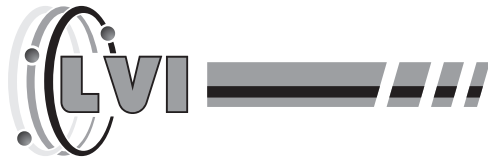


ROTOR ASSEMBLY

Rotor assembly with flails installed

#LT083019, Pulvimaster 72

#LT082619, Pulvimaster 96

#LT220602, Pulvimaster 120

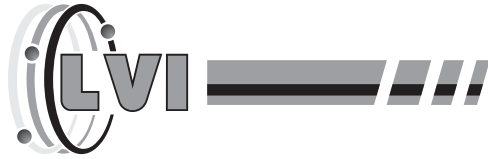

FLAILS

- 5/8" x 1 3/4" Bolt
- 5/8" Flat washer
- LTPM7-33 Laser washer
- LTGB0218 Bushing
- LTPM7-30B Flail
- 5/8" Lock nut

Pulvimaster 72 uses 44 of each item
Pulvimaster 96 uses 60 of each item
Pulvimaster 120 uses 76 of each item





BEARING AT EACH END OF ROTOR

- 1 3/4" I.D. with lock collar
- 4 bolt mount
- #LTB1344

Retained by:

- 4 - 5/8" x 2" bolt
- 4 - 5/8" nut
- 4 - 5/8" lock washer

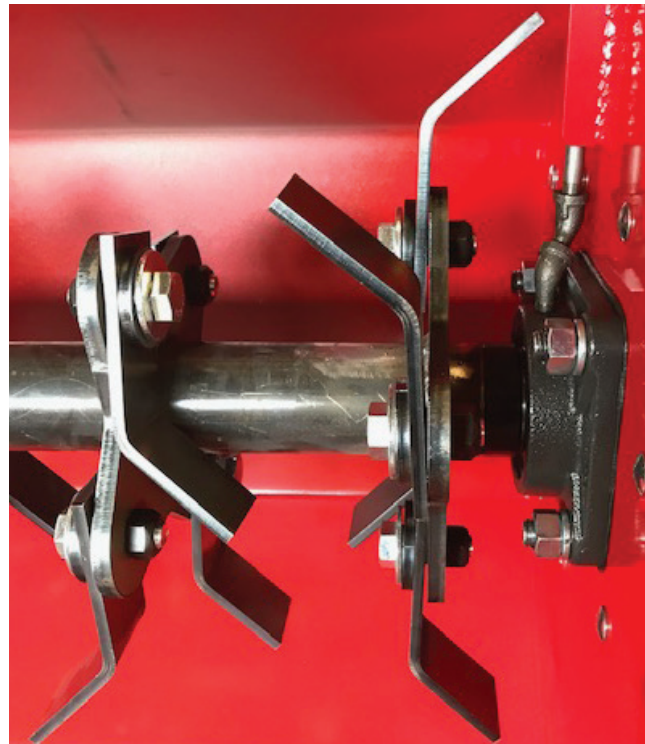



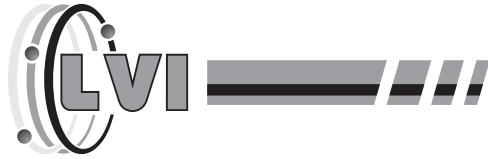


GREASE TUBE

Grease tube on each bearing extends out front of machine

- 1 - Grease sert 1/8" NPT #LT63225
- 1 - Pipe coupler 1/8" NPT #LT228700
- 1 - Stainless steel tube 1/8" x 8" #LT1XAN4
- 2 - 45° elbow 1/8" street el #LTSE18B45

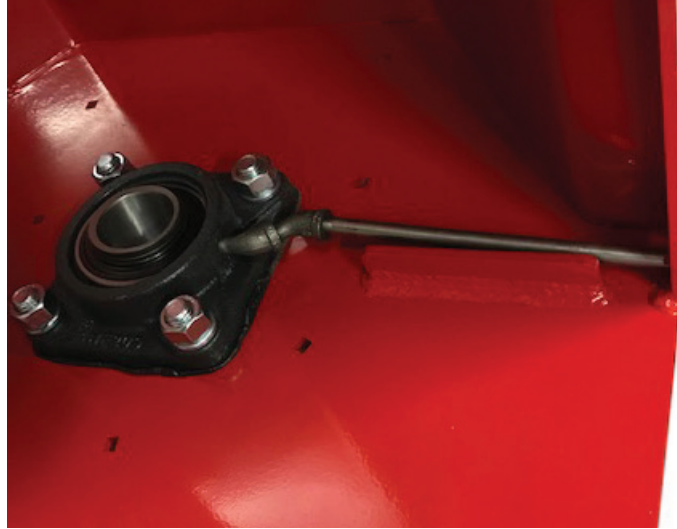

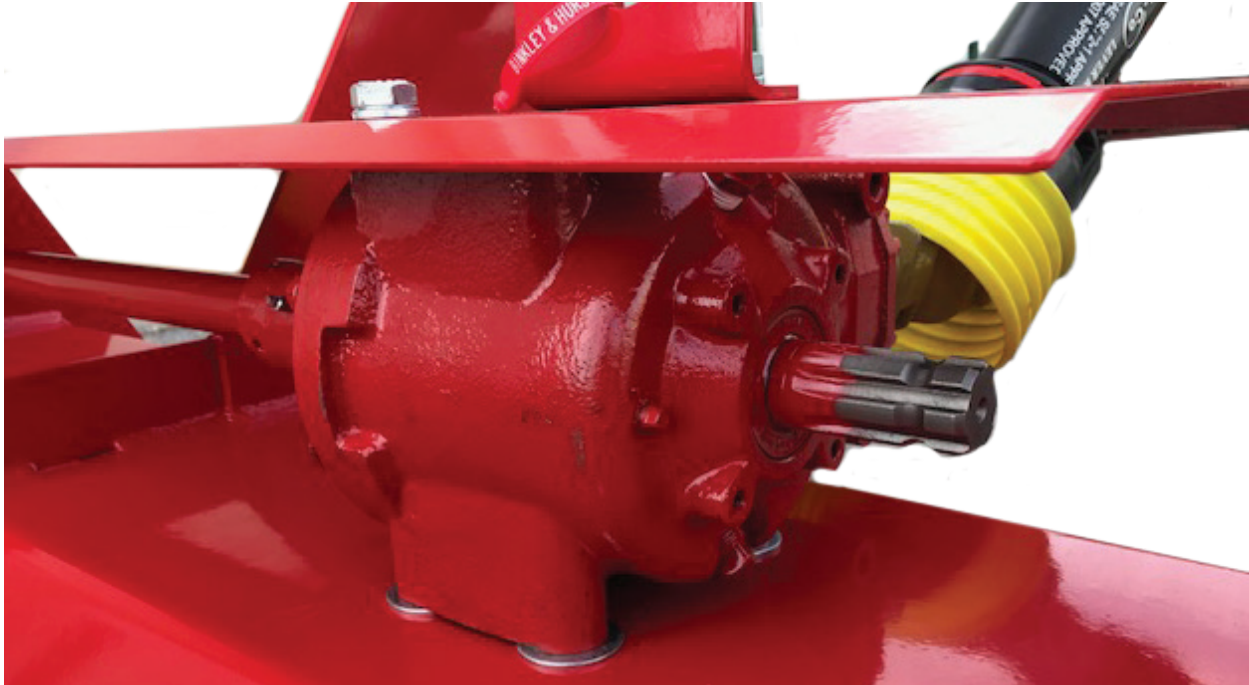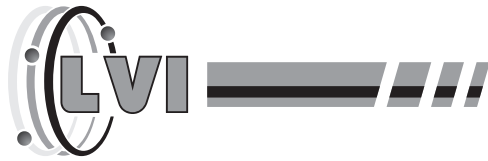


GEAR BOX - #LTB7513

Gear box attachment to frame

- 4 - 5/8" x 1 1/2" hex head bolt
- 8 - flat washers
- 4 - lock washers

Note: flat washers between gear box and main frame

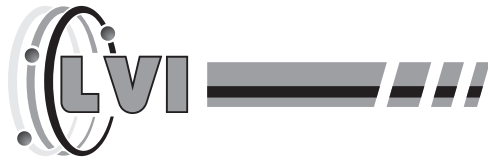

DRIVE SHAFT


Top drive shaft gearbox out to chain case
3/8" key way both ends - snap ring groove on one end
1 1/2" diameter shaft

- Pulvimaster 72 - 28" long - #LT070219
- Pulvimaster 96 - 35 1/2" long - #LT070119
- Pulvimaster 120 - 55 3/8" long - #LT220604

DRIVE COUPLER

Drive coupler gearbox to horizontal drive shaft
1 1/2" rnd. I.D. with 3/8" keyway
1 3/8" 6 spline I.D.
#LT080115
Uses 1 - 3/8" key - #LT3838214



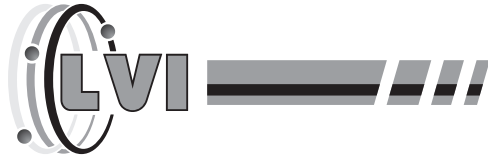

CHAIN CASE

Chain case assembly - #LT070319

Retained with 12 5/16" x 1" carriage bolt,
nut, lock washer

Breather fitting on top - #LT190729 m91

Breather bushing 3/8" - 1/2" NPT - #LT44236

Oil level check plug 3/8" NPT - #LT44277



HINGES

6 Hinges on rear tail drag lid - #LT660225

4 - 3/8" x 3/4" bolt, nut, lock washer

Rear tail drag lid


Pulvimaster 72 - #LT070519


Pulvimaster 96 - #LT070419

Pulvimaster 120 - #LT220608 (complete assembly)



Install with hinge pin "heads" pointed
toward each other

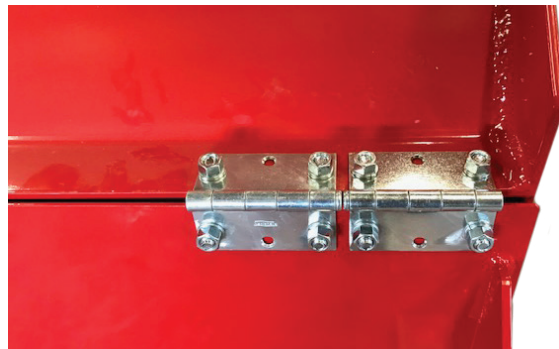

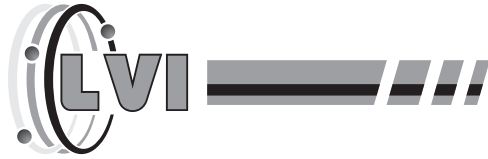

TAIL GATE LID

Tail gate lid restraint chains

Both chains are same - #LT082719

Right side


1 - 5/16" x 1 1/4" bolt, nut, lock washer, (3) flat washers



Left side

1 - 5/16" x 1 1/4" bolt, nut, lock washer, flat washer



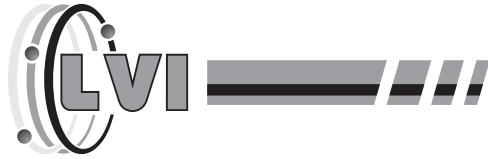

TOP BEARING

Bearing - Top drive shaft at chain case
1 1/2" I.D. - lock collar
4 bolt mount

#LTB1124

retained by: (4) - 9/16" x 2" bolt, flat
washer, nut, lock washer




BOTTOM ROTOR BEARING

1 3/4" ID with lock collar
4 bolt mount

#LTB1344

retained by: (4) - 5/8" x 2" bolt
(4) - 5/8" nut
(4) - 5/8" lock washer



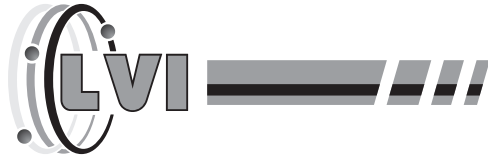

TOP SHAFT


Spacer between bearing and sprocket
#LT082819
1 3/8" long, 1 1/2" I.D.



BOTTOM SHAFT

Spacer between bearing and sprocket
#LT082919
1 3/8" long, 1 13/16" I.D.



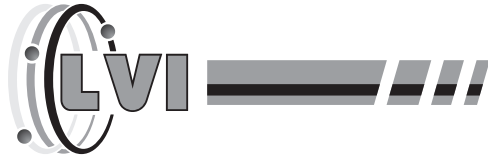

TOP SPROCKET

Top sprocket - #LT80BS18X11/2

#80 18 teeth

1 1/2" bore 3/8" keyway

(1) - snapping - #LTSRE112

machine washers as needed 1 1/2" I.D.

(1) - 3/8" x 3/8" hardened key - #LT3838112



DRIVE CHAIN

Drive chain - #LTRC8044

#80 44 rollers

(1) - #80 connector link #LT80CLHKK



BOTTOM SPROCKET

Bottom sprocket - #LT80BS16X13/4

#80 16 teeth

1 3/4" bore I.D.


(1) 7/16" key way

(1) - snapping - #LTSRE134

machine washers as needed 1 3/4" I.D. - #LTMBL13/4

(1) - 7/16" x 7/16" hardened key - #LT716716112



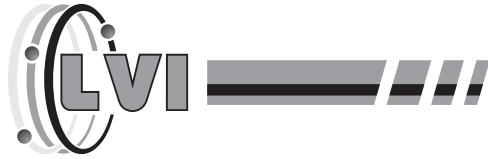


SKID SHOES

Left & right - same

#LT070619

(2) 1 1/2" x 1/2" carriage bolt, nut, lock washer



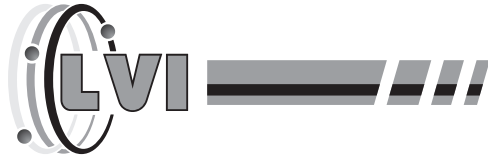

PTO SHAFT

Complete PTO shaft

overall length 30"

6 spline 1 3/8" quick disconnect each end

#6 series

#LT69P524



YOKE


Yoke - 6 spline 1 3/8" quick disconnect

#6 series - #LTMA622138

cross kit - #6 series - #LTMA600

shield assembly (both halves) #LTMAS30130



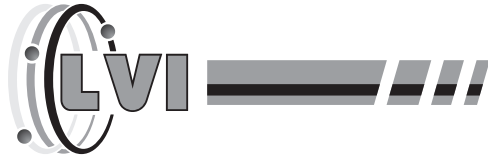


WEAR PLATE

Wear plate UHMW material on right end of machine

#LT011819

retained by: 2 - 1/2" x 1 1/2"
carriage bolt, lock washer, nut




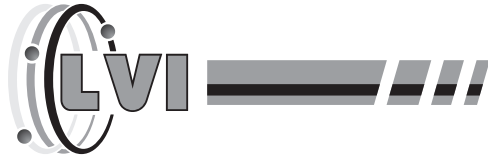

WARRANTY POLICY TERMS AND CONDITIONS

BINKLEY & HURST, LP P.O. BOX 100, 700 EAST LINDEN STREET, RICH LAND, PA 17087, provides the following limited warranty on its LVI-branded products in accordance with the provisions below to each original retail purchaser of new LVI equipment of its own manufacture. Such equipment is, at the time of delivery to end user, free from defects in material and workmanship and will be warranted for a period of **6 months for single farm use and 3 months for custom (for hire) use** from the date of delivery. The machine must be used and serviced in accordance with the recommendations of LVI and be operated under normal farm conditions for which the unit is designed.

1. This warranty will be void if any equipment is deemed by LVI to have been used for purposes other than that for which it is intended or if it has been misused, neglected, damaged, let out for hire or furnished for rental. Claims will not be accepted if parts other than those manufactured or supplied by LVI have been used on any LVI equipment. Further, LVI will not be responsible for damage incurred in transit or handling and under no circumstances within or without the warranty period will LVI be liable for damage claims due to downtime or inability to use the machine.
2. LVI will not be held responsible for loss of livestock, poultry, pets or any expense or costs incurred for labor, supplies, substitute machinery rental for any other reason, or for injuries either to the owner or to a third party. LVI is not responsible for labor charges, other than those originally agreed upon which are incidentally incurred in the removal or replacement of components on LVI product.
3. The Customer will be responsible for and bear the cost of:
 - a. Maintenance such as greasing, maintenance of oil levels, minor adjustments, timely replacement of wear items.
 - b. Transportation of any LVI product to and from where the warranty work is performed.
 - c. Dealer travel time to and from the machine or to deliver and return the machine from the workshop for repair.
 - d. Dealer travel costs.
4. Normal wearing items, (i.e. cutting edge, skid shoes, etc.) are not covered under this warranty.
5. This warranty will not apply to any product that is altered or modified without the express written permission of LVI. Warranty repairs must be authorized by LVI or LVI-approved dealers.

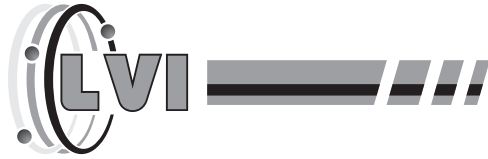

6. This warranty may not be assigned or transferred to anyone.
7. Signing this form indicates that i have read and understand the owners manual and am capable of operating the machine in a safe and responsible manner.

WARRANTY REGISTRATION

Customer Name: _____

Dealer Name: _____

Address: _____

City/State/Zip: _____


Phone: _____ Cell: _____

Machine Model: _____ Machine Serial: _____

Delivery Date: _____ Sales Person: _____

Customer Signature: _____


3 COPIES REQUIRED: 1-BINKLEY & HURST, LP 2-DEALER 3-CUSTOMER

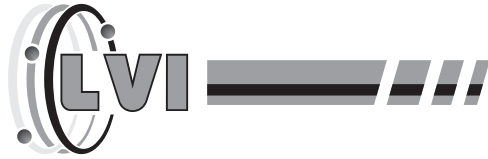

WARRANTY POLICY TERMS AND CONDITIONS

BINKLEY & HURST, LP P.O. BOX 100, 700 EAST LINDEN STREET, RICH LAND, PA 17087, provides the following limited warranty on its LVI-branded products in accordance with the provisions below to each original retail purchaser of new LVI equipment of its own manufacture. Such equipment is, at the time of delivery to end user, free from defects in material and workmanship and will be warranted for a period of **6 months for single farm use and 3 months for custom (for hire) use** from the date of delivery. The machine must be used and serviced in accordance with the recommendations of LVI and be operated under normal farm conditions for which the unit is designed.

1. This warranty will be void if any equipment is deemed by LVI to have been used for purposes other than that for which it is intended or if it has been misused, neglected, damaged, let out for hire or furnished for rental. Claims will not be accepted if parts other than those manufactured or supplied by LVI have been used on any LVI equipment. Further, LVI will not be responsible for damage incurred in transit or handling and under no circumstances within or without the warranty period will LVI be liable for damage claims due to downtime or inability to use the machine.
2. LVI will not be held responsible for loss of livestock, poultry, pets or any expense or costs incurred for labor, supplies, substitute machinery rental for any other reason, or for injuries either to the owner or to a third party. LVI is not responsible for labor charges, other than those originally agreed upon which are incidentally incurred in the removal or replacement of components on LVI product.
3. The Customer will be responsible for and bear the cost of:
 - a. Maintenance such as greasing, maintenance of oil levels, minor adjustments, timely replacement of wear items.
 - b. Transportation of any LVI product to and from where the warranty work is performed.
 - c. Dealer travel time to and from the machine or to deliver and return the machine from the workshop for repair.
 - d. Dealer travel costs.
4. Normal wearing items, (i.e. cutting edge, skid shoes, etc.) are not covered under this warranty.
5. This warranty will not apply to any product that is altered or modified without the express written permission of LVI. Warranty repairs must be authorized by LVI or LVI-approved dealers.

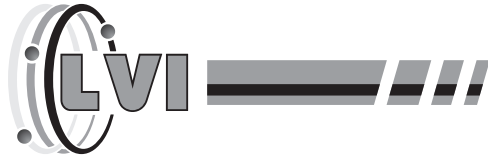

6. This warranty may not be assigned or transferred to anyone.
7. Signing this form indicates that i have read and understand the owners manual and am capable of operating the machine in a safe and responsible manner.

WARRANTY REGISTRATION

Customer Name: _____

Dealer Name: _____

Address: _____

City/State/Zip: _____


Phone: _____ Cell: _____

Machine Model: _____ Machine Serial: _____

Delivery Date: _____ Sales Person: _____

Customer Signature: _____


3 COPIES REQUIRED: 1-BINKLEY & HURST, LP 2-DEALER 3-CUSTOMER

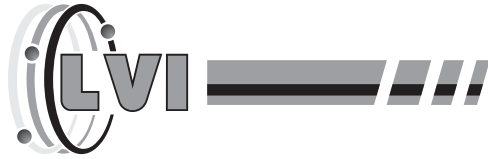

WARRANTY POLICY TERMS AND CONDITIONS

BINKLEY & HURST, LP P.O. BOX 100, 700 EAST LINDEN STREET, RICH LAND, PA 17087, provides the following limited warranty on its LVI-branded products in accordance with the provisions below to each original retail purchaser of new LVI equipment of its own manufacture. Such equipment is, at the time of delivery to end user, free from defects in material and workmanship and will be warranted for a period of **6 months for single farm use and 3 months for custom (for hire) use** from the date of delivery. The machine must be used and serviced in accordance with the recommendations of LVI and be operated under normal farm conditions for which the unit is designed.

1. This warranty will be void if any equipment is deemed by LVI to have been used for purposes other than that for which it is intended or if it has been misused, neglected, damaged, let out for hire or furnished for rental. Claims will not be accepted if parts other than those manufactured or supplied by LVI have been used on any LVI equipment. Further, LVI will not be responsible for damage incurred in transit or handling and under no circumstances within or without the warranty period will LVI be liable for damage claims due to downtime or inability to use the machine.
2. LVI will not be held responsible for loss of livestock, poultry, pets or any expense or costs incurred for labor, supplies, substitute machinery rental for any other reason, or for injuries either to the owner or to a third party. LVI is not responsible for labor charges, other than those originally agreed upon which are incidentally incurred in the removal or replacement of components on LVI product.
3. The Customer will be responsible for and bear the cost of:
 - a. Maintenance such as greasing, maintenance of oil levels, minor adjustments, timely replacement of wear items.
 - b. Transportation of any LVI product to and from where the warranty work is performed.
 - c. Dealer travel time to and from the machine or to deliver and return the machine from the workshop for repair.
 - d. Dealer travel costs.
4. Normal wearing items, (i.e. cutting edge, skid shoes, etc.) are not covered under this warranty.
5. This warranty will not apply to any product that is altered or modified without the express written permission of LVI. Warranty repairs must be authorized by LVI or LVI-approved dealers.

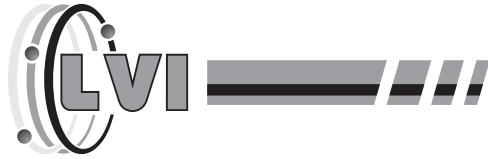

6. This warranty may not be assigned or transferred to anyone.
7. Signing this form indicates that i have read and understand the owners manual and am capable of operating the machine in a safe and responsible manner.

WARRANTY REGISTRATION

Customer Name: _____

Dealer Name: _____

Address: _____

City/State/Zip: _____

Phone: _____ Cell: _____

Machine Model: _____ Machine Serial: _____

Delivery Date: _____ Sales Person: _____

Customer Signature: _____

3 COPIES REQUIRED: 1-BINKLEY & HURST, LP 2-DEALER 3-CUSTOMER